

Jacket Stripping Tool

For Cinta braided Cable CNT-400



1. Open tool by releasing lever.
2. Place over cable and snap closed
3. Rotate the tool by pushing the snap lever with thumb. (See Fig. A.) For Optimal Results: Ensure rotation of tool follows the feed direction as noted in Fig. B.
4. When desired amount of jacket has been removed, stop directional pressure and spin the tool freely to cut off excess jacket.
5. Pull back snap lever and remove tool from cable.

← Rotate

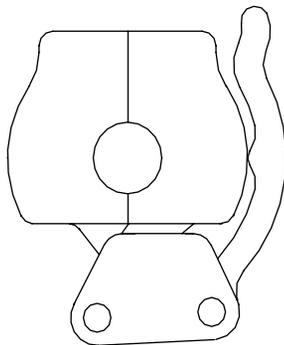


Fig. A

← Feed

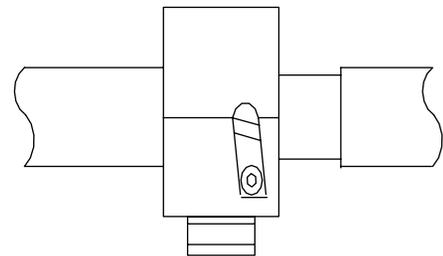


Fig. B



NOTE: In cases where cable variations cause strip blade to come in contact with the aluminum sheath, the spring washer stored under the screw head may be installed under the jacket strip blade. (Hex key is enclosed with tool.)

Installation Training Available at Andrew Institute



Notice: Andrew disclaims any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.

Andrew Corporation

3 Westbrook Corporate Center, Suite 900, Westchester, Illinois U.S.A. 60154
+1 (779) 435-8579 Fax (U.S.A.): 1-800-349-5444
www.andrew.com

Copyright © 2009 by Andrew Corporation

Customer Service, 24 hours

U.S.A., Canada, Mexico: 1-800-255-1479
U.K.: 0800 250055
Other Europe: +44 592 782 612
China: +86 512-6256-8805