




INSTALLATION INSTRUCTION FOR HARD CEILING MOUNTING KIT (7705125)

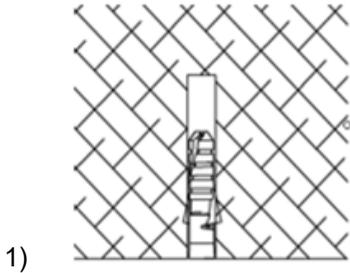

1)

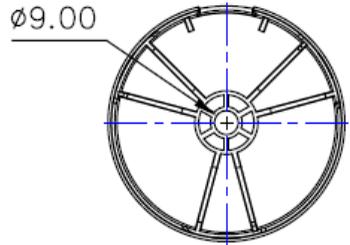

2)

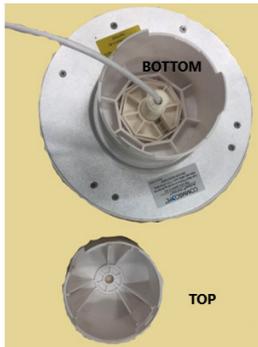

3)



4)

Installation Steps

- 1) Drill a hole in the ceiling and use the correct anchor for the ceiling material. The hole in the mount is 9mm / .354", so be sure to use an anchor that will pass through the mounting hole.
- 2) Screw the upper part to the ceiling with anchor, nut and washer, observing the cable outlet direction.
- 3) Attached the bottom half of the mount to the antenna using the nut that is supplied with the antenna.
- 4) Snap in the antenna and bottom part assembly as shown. Observe the bending radius of the antenna cables.

This document is a specification. No disclosure or reproduction of the information or drawings shall be made for any purpose without the prior written consent of CommScope. Use of the information contained herein to fabricate or assemble any item in whole or in part is expressly prohibited.

© Copyright 2020 CommScope, Inc.

All rights reserved.

All information contained in this manual has been revised thoroughly. Yet CommScope accepts no liability for any omissions or faults.

CommScope reserves the right to change all hardware and software characteristics without notice.

Names of products mentioned herein are used for identification purposes only and may be trademarks and / or registered trademarks of their respective companies.

No parts of this publication may be reproduced, stored in a retrieval system, transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise, without prior written permission of the publisher.

CommScope, 11-March-2020