



# MT500A-KIT-SOLND

## MT500A Solenoid Replacement Kit

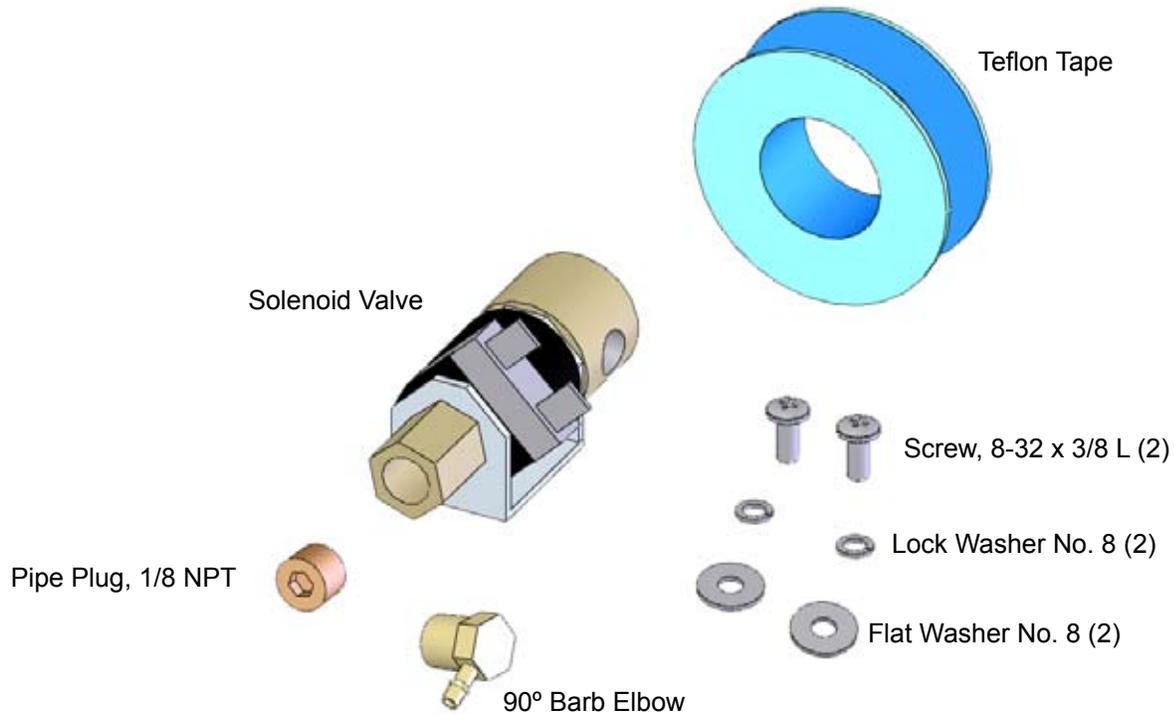

### Andrew MT500A-KIT-SOLND Components

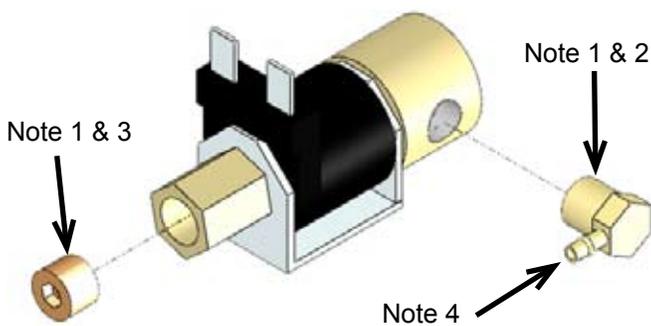

1. Wrap both male fittings with Teflon tape.
2. Screw barbed fitting into solenoid valve input as shown. This will be the **NC** port.
3. Screw internal hex plug into front port on solenoid valve.
4. Attach 1/4" hose to the barb on the solenoid. The opposite end of the hose will attach to the output fitting on the bottom of the filter bowls.



### SOLENOID SUB-ASSEMBLY



**ANDREW®**

## **MT500A-KIT-SOLND**

### **MT500A Solenoid Replacement Kit**

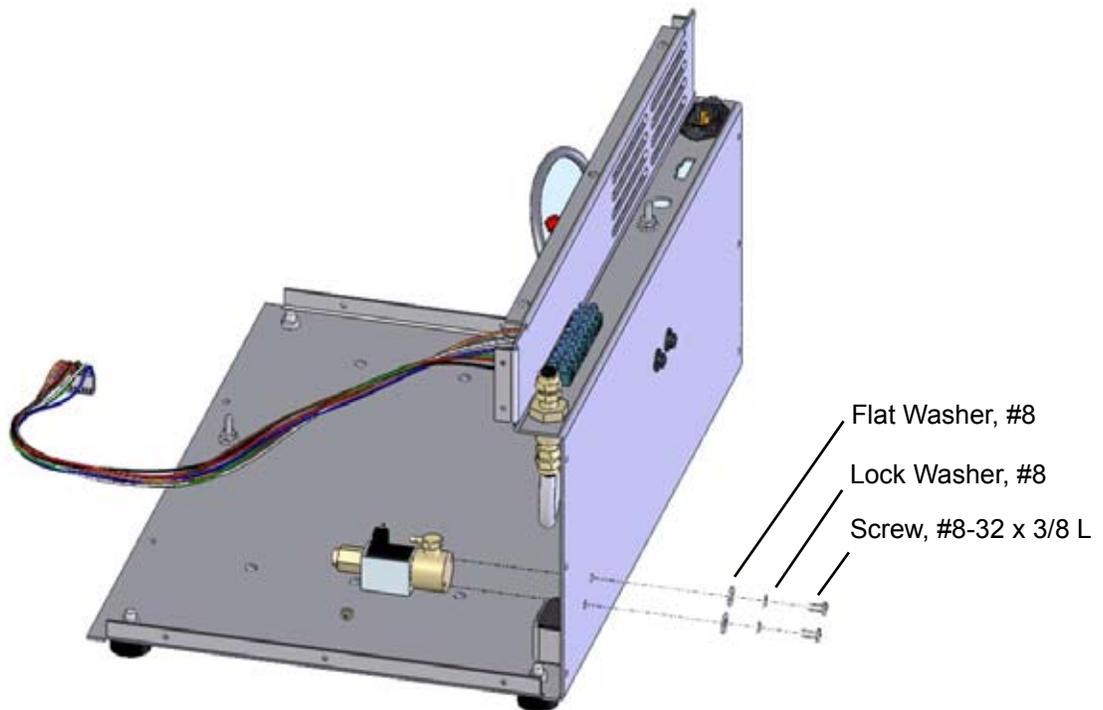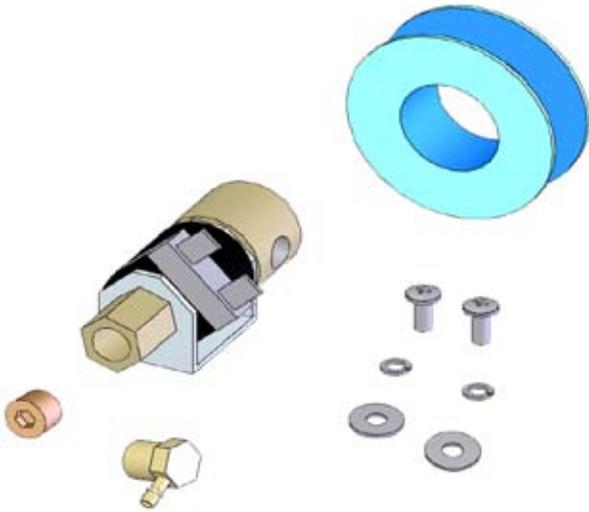

### **SOLENOID VALVE INSTALLATION**

1. Fasten the solenoid valve sub-assembly to the rear chassis using #8-32 screws, #8 lock washers, and #8 flat washers.



3 Westbrook Corporate Center  
Suite 900  
Westchester, IL 60154 USA

**One Company. A World of Solutions.**

**Customer Support Center  
From North America**  
Telephone: 1-800-255-1479

**International**  
Telephone: +1-779-435-6500

**Internet:** [www.andrew.com](http://www.andrew.com)

All designs, specifications and availability of products and services presented in this bulletin are subject to change without notice.

Bulletin AE01B-A0531-005 (6/07) © 2007  
Andrew Corporation, 3 Westbrook Corporate Center, Suite 900 Westchester, IL 60154 USA