

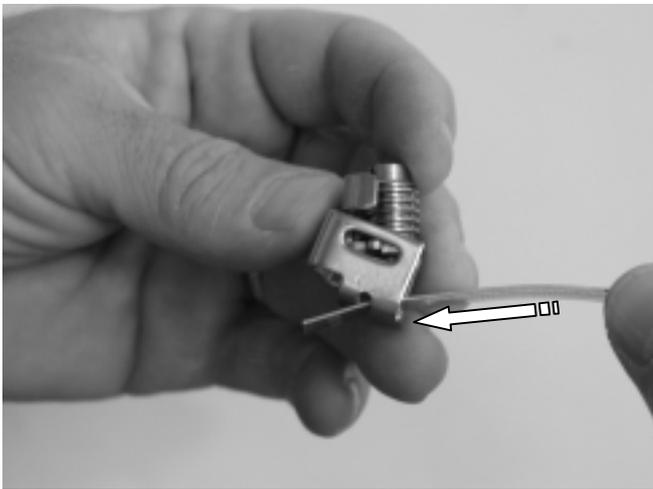



TMA Mounting Instructions

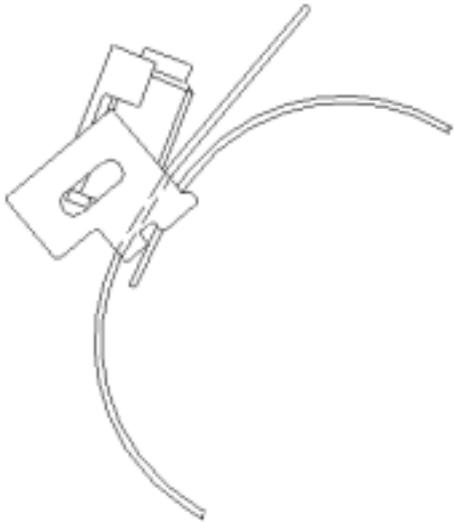


Step 1 Insert one terminal of the band into the lower slot of the buckle.

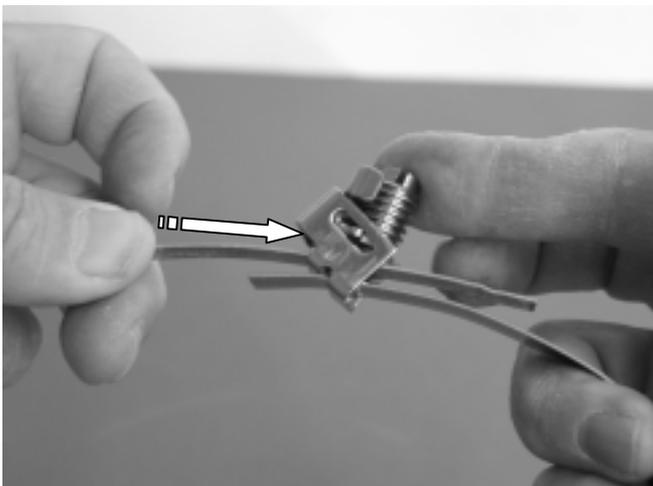

Step 2 Insert the other terminal of the band into the upper slot of the buckle

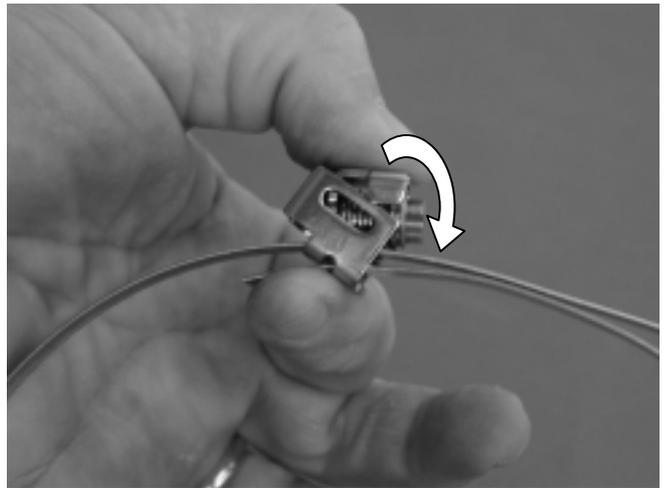

Step 3 Rotate the screw toward the band while pressing.

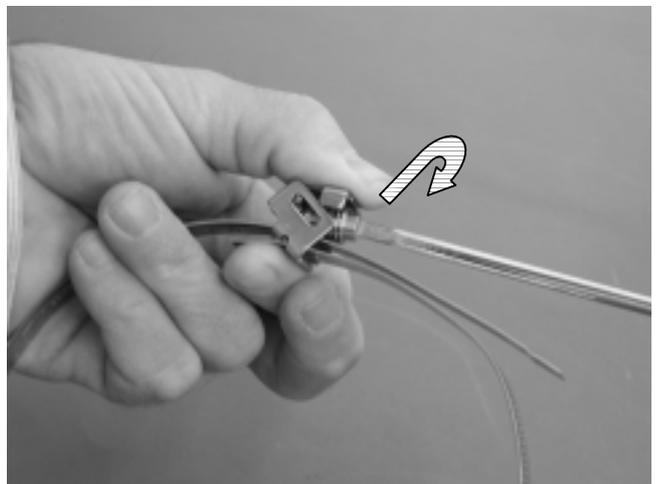

Step 4 Tighten the screw along the band up to the required strength (max 5 Nm) by means of a screwdriver.

